
जल निर्मित निक्षेपों को हटाने के लिए प्रयुक्त
विलायक प्रणालियों के विश्लेषण के तरीके
(पहला पुनरीक्षण)

Methods for Analysis of Solvent
Systems Used for the Removal of
Water Formed Deposits
(First Revision)

ICS 87.060.30

© BIS 2023



भारतीय मानक ब्यूरो
BUREAU OF INDIAN STANDARDS
मानक भवन, 9 बहादुर शाह ज़फर मार्ग, नई दिल्ली - 110002
MANAK BHAVAN, 9 BAHADUR SHAH ZAFAR MARG
NEW DELHI - 110002
www.bis.gov.in www.standardsbis.in

FOREWORD

This Indian Standard (First Revision) was adopted by the Bureau of Indian Standards after the draft finalized by the Water Quality for Industrial Purposes Sectional Committee had been approved by the Chemical Division Council.

These methods cover analysis of both the solvents and the deposits in the solvents used for the chemical cleaning of industrial equipment. Prior to analysis for soluble constituents in the solvent, the sample is filtered to remove insoluble matter.

The procedures prescribed in this standard cover methods for determination of concentration of the following solvents during or after use: Acetic acid, ammonia, ammonium sulphate in ammonia, chromic acid, formic acid, hydrazine, hydrochloric acid, hydrochloric acid with copper complexing agents, hydroxy acetic acid and formic acid mixtures, phosphoric acid, potassium hydroxide, sodium or potassium bromate, sodium carbonate, sodium hydroxide, sodium phosphate, Sulphamic acid and sulphuric acid.

This standard was published in 1988. In this first revision the following changes have been incorporated:

- a) References, ICS No. have been updated; and
- b) Other editorial changes have been done to bring the standard in the latest style and format of Indian Standards.

The composition of committee responsible for the formulation of this standard is listed in Annex A.

For the purpose of deciding whether a particular requirement of this standard is complied with, the final value, observed or calculated, expressing the result of a test or analysis, shall be rounded off in accordance with IS 2 : 2022 'Rules for rounding off numerical values (*second revision*)'.

*Indian Standard***METHODS FOR ANALYSIS OF SOLVENT SYSTEMS USED
FOR THE REMOVAL OF WATER FORMED DEPOSITS***(First Revision)***1 SCOPE**

This standard covers the analysis of both the solvents and the deposits, constituents in the solvents used for the chemical cleaning of industrial equipment.

2 REFERENCES

The standards listed below contain provisions which through reference in this text, which constitute provisions of this standard. At the time of publications, the editions indicated were valid. All standards are subject to revision and parties to agreements based on this standard are encouraged to investigate the possibility of applying the most recent editions of the standards listed below:

<i>IS No.</i>	<i>Title</i>
IS 11671 : 2022	Glossary of terms relating to boiler water

3 TERMINOLOGY

For the purpose of this standard the definitions given in IS 11671 shall apply.

4 ACID CONTENT OF ACID SOLVENTS**4.1 Principle**

The acid concentration is determined by titration with standard sodium hydroxide solution using a suitable indicator.

4.2 Interference

There is no interference when analyzed for original acid concentration of various acid solvents. Iron interferes when determining the concentration of acid remaining in the solvents after use as cleaning solutions. This can be minimized by the proper

choice of acid-base indicators. It is significant only when the acidic solvent contains over 1 percent iron in solution.

4.3 Reagents

4.3.1 Chlorophenol Red Indicator Solution, 0.5 g/l.

4.3.2 Mixed Indicator Solution

Dissolve 0.05 g of bromocresol green in 50 ml of rectified spirit and 0.75 g of methyl red in rectified spirit. Mix well these two solutions.

4.3.3 Methyl Red Indicator, 1 g/l.

4.3.4 Phenolphthalein Indicator Solution, 10 g/l.

4.3.5 Standard Sodium Hydroxide Solution, 0.5 N.

4.4 Procedure

4.4.1 Dilute an aliquot of the sample with water to 30 ml to 50 ml in a 125 ml Erlenmeyer flask. Choose the aliquot size so that a titration volume greater than 5 ml and less than 15 ml of 0.5 N sodium hydroxide solution is required. In case of concentrated acids, this may require diluting 5 ml to 10 ml of the sample to 50 ml or 100 ml before taking an aliquot for titration with 0.5 N sodium hydroxide solution.

4.4.2 Add 4 drops of the designated indicator solution and titrate with 0.5 N sodium hydroxide solution until the colour of the solution changes from red to yellow for methyl red, from yellow to red for chlorophenol red, from red through grey to blue-green for mixed indicator, and from colourless to red for phenolphthalein.

4.4.3 Select the appropriate indicator as specified in Table 1 and Fig 1.

4.4.4 Record the ml of sodium hydroxide solution required for the titration (A).

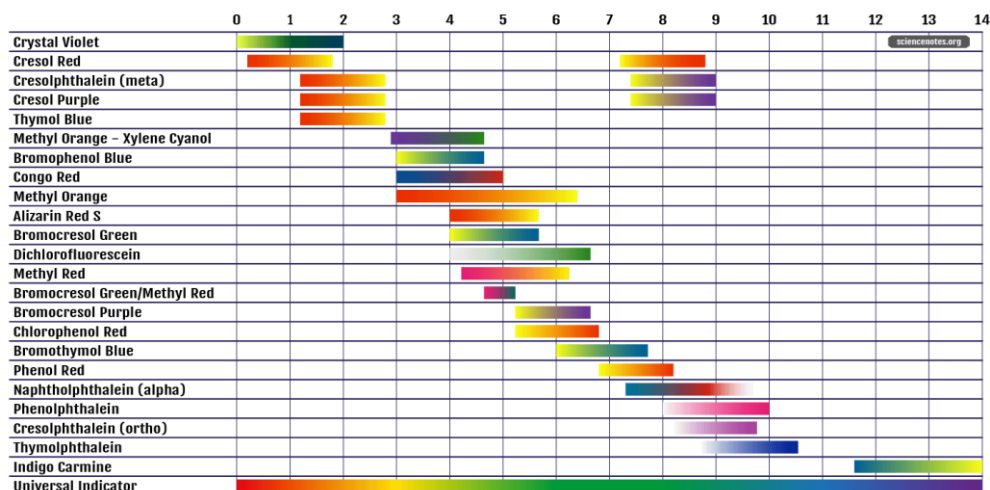


FIG. 1 INDICATOR SELECTION

Table 1 Selection of Indicator
(Clause 4.4.3)

Sl No.	Acid	Methyl Red (MR)	Chlorophenol Red (CPR)	Mixed (Mix)	Phenolphthalein (PE)
(1)	(2)	(3)	(4)	(5)	(6)
i)	Acetic acid	O	-	O - S	-
ii)	Citric acid	-	-	-	O
iii)	Formic acid	O	O - S	O - S	-
iv)	Hydrochloric acid	O	-	O - S	-
v)	Hydroxyacetic acid	O	O - S	O - S	-
vi)	Phosphoric acid	-	-	O - S	O
vii)	Sulfamic acid	O	-	O - S	-
viii)	Sulfuric acid	O	-	O - S	-
ix)	2-hydroxyacetic acid : 1 formic acid	O	O - S	-	-

O = Original concentration of acid solvent.
S = Spent solvents acid content.

4.5 Calculation

4.5.1 Calculate the concentration of the acid in the solvent in percent as follows:

$$\text{Acetic acid, percent} = \left(\frac{AN}{BS} \right) \times 6.0$$

$$\text{Citric acid, percent} = \left(\frac{AN}{BS} \right) \times 6.4$$

$$\text{Formic acid, percent} = \left(\frac{AN}{BS} \right) \times 4.6$$

$$\text{Hydrochloric acid, percent} = \left(\frac{AN}{BS} \right) \times 3.6$$

$$\text{Phosphoric acid, percent} = \left(\frac{AN}{BS} \right) \times 7.6$$

$$\text{Sulfamic acid, percent} = \left(\frac{AN}{BS} \right) \times 9.8$$

$$\text{Sulphuric acid, percent} = \left(\frac{AN}{BS} \right) \times 4.9$$

$$\text{2 - hydroxyacetic acid : 1 formic acid, percent}$$

$$= \left(\frac{AN}{BS} \right) \times 6.6$$

where

A = volume of sodium hydroxide solution required for the titration, in ml;

N = normality of sodium hydroxide solution;

B = volume of sample titrated, in ml; and

S = specific gravity of the sample.

4.5.2 If a dilution was required, multiply the answer by a dilution factor. For example, for 10 ml diluted to 100 ml prior to taking a 5 ml aliquot, the percent acid = $(AN/BS) \times 10 \times 6.0$ for acetic acid.

5 INITIAL CITRIC ACID CONCENTRATION OF MONO AMMONIATED CITRIC ACID DURING FILLING

5.1 Principle

The citric acid concentration is determined by titration with a standard base. The citric acid concentration is calculated assuming a pH 4 solution or based on the quantity of the chemicals used.

5.2 Reagents

5.2.1 Phenolphthalein Indicator Solution, (see 4.3.4).

5.2.2 Standard Sodium Hydroxide Solution, 0.5 N.

5.3 Procedure

5.3.1 Pipette an aliquot of the sample containing 0.25 g to 0.5 g of citric acid into a 50 ml Erlenmeyer flask. Add 10 ml to 20 ml of water, and 2 drops to 3 drops of phenolphthalein indicator. Titrate to a permanent pink colour with the standard base.

5.4 Calculation

5.4.1 Calculate the percent of citric acid as follows:

$$\text{Citric acid, percent} = \frac{ANF}{CS}$$

where

- A = volume of sodium hydroxide solution required for the titration, in ml;
- N = normality of sodium hydroxide solution;
- F = 12.4 for pH 4 ammoniated citric acid solution;
- C = volume of sample titrated, in ml; and
- S = specific gravity of the sample.

When the weight of citric acid and ammonia used to make up the pH 4 solution are known, then

$$F = \frac{19.2}{\left[3 - \frac{\text{kg ammonia (NH}_3\text{)}}{\text{kg citric acid}} \times 11.3\right]}$$

6 BROMATE OR PERSULPHATE IN AMMONIACAL SOLUTIONS

6.1 Principle

The bromate or persulphate in the solvent is reacted with potassium iodide (KI) and the liberated iodine

is titrated with standard sodium thiosulphate ($\text{Na}_2\text{S}_2\text{O}_3$) solution using a starch indicator. Intensity of starch-iodine colour is increased by the endothermic hydration of potassium thiocyanate. In the case of a spent solvent, copper is first determined as and the amount of $\text{Na}_2\text{S}_2\text{O}_3$ required for copper titration is deducted to obtain the bromate or persulphate content.

6.2 Reagents

6.2.1 Hydrochloric Acid

Mix one volume of concentrated acid (specific gravity 1.19) with one volume of water.

6.2.2 Potassium Iodide, solid.

6.2.3 Potassium Thiocyanate, solid.

6.2.4 Standard Sodium Thiosulphate Solution, 0.1 N.

6.2.5 Starch Indicator Solution

6.3 Procedure

6.3.1 Dilute a 5 ml sample (C) with 30 ml to 50 ml of water in a 250 ml Erlenmeyer flask.

6.3.2 Add 5 ml of hydrochloric acid (1 + 1).

6.3.3 Add 5 g of potassium iodide to the sample, dissolve, stopper, and allow to stand for 5 min.

6.3.4 Titrate with 0.1 N sodium thiosulphate solution until almost colourless. Add starch indicator solution and continue the titration until nearly all of the purple colour disappears.

6.3.5 Add 2 g of potassium thiocyanate and titrate to a colourless end point.

6.3.6 Record the milliliters of sodium thiosulphate solution required for the titration (A).

6.4 Calculation

6.4.1 Calculate the concentration of NaBrO_3 or KBrO_3 or $(\text{NH}_4)_2\text{S}_2\text{O}_8$ in the solvent in percent as follows:

$$(\text{NH}_4)_2\text{S}_2\text{O}_8, \text{ percent} = [(A - B) N \times 1.14]/CS$$

$$\text{KBrO}_3, \text{ percent} = [(A - B) N \times 2.80]/CS$$

$$\text{NaBrO}_3, \text{ percent} = [(A - B) N \times 2.5]/CS$$

where

- A = volume of sodium thiosulphate ($\text{Na}_2\text{S}_2\text{O}_3$) solution required for copper plus bromate or persulphate titration, in ml;

B = volume of $\text{Na}_2\text{S}_2\text{O}_3$ solution required for titration of copper in the solvent (*see 11*), in ml;

N = normality of $\text{Na}_2\text{S}_2\text{O}_3$ solution;

C = volume of sample titrated, in ml; and

S = specific gravity of the sample.

7 AMMONIA, POTASSIUM HYDROXIDE, SODIUM HYDROXIDE AND SODIUM CARBONATE IN CLEANING SOLUTIONS

7.1 Principle

The ammonia, potassium hydroxide (KOH), sodium hydroxide (NaOH) or sodium carbonate (Na_2CO_3) concentration is determined by titration with standard hydrochloric acid (HCl) using methyl orange indicator.

7.2 Interference

Sodium hydroxide and potassium permanganate (KMnO_4) are used as alkaline oxidizing treatment on organic deposits. The permanganate interferes with the determination of sodium hydroxide. This interference is eliminated by reacting permanganate with hydrogen peroxide (H_2O_2) and removing the precipitate by filtration.

7.3 Reagents

7.3.1 Hydrochloric Acid, 0.1 N.

7.3.2 Hydrogen Peroxide, 30 percent.

7.3.3 Methyl Orange Indicator Solution, 1 g/l.

7.4 Procedure

7.4.1 Pipette an aliquot of the sample into an Erlenmeyer flask containing 25 ml to 50 ml of water. The aliquot volume should be chosen so that at least 5 ml, but not more than 15 ml of 0.1 N HCl is required for the titration.

7.4.2 For NaOH solutions containing permanganate, pretreat as follows:

7.4.2.1 Heat diluted sample to boil. Add hydrogen peroxide, 30 percent drop wise until the permanganate colour disappears and the manganese hydroxide $[\text{Mn}(\text{OH})_3]$ flocculates. Filter while hot through a highly retentive paper. Wash three times with water, collecting the filtrate and washings in a beaker, and proceed to **7.4.3**.

7.4.3 Add 3 drops of methyl orange indicator solution.

7.4.4 Titrate with 0.1 N hydrochloric acid to a red end point.

7.4.5 Record the ml of hydrochloric acid required for the titration (A).

7.5 Calculation

7.5.1 Calculate the concentration of ammonia, sodium carbonate, or alkali in the solvent or solution as follows:

$$\text{Ammonia (NH}_3\text{), percent} = \left(\frac{AN}{BS}\right) \times 1.7$$

Potassium hydroxide (KOH), percent

$$= \left(\frac{AN}{BS}\right) \times 5.6$$

Sodium carbonate (Na_2CO_3), percent

$$= \left(\frac{AN}{BS}\right) \times 5.3$$

Sodium hydroxide (NaOH), percent

$$= \left(\frac{AN}{BS}\right) \times 4.0$$

where

A = volume of HCl required for the titration, in ml;

N = normality of HCl;

B = volume of sample titrated, in ml; and

S = specific gravity of the sample.

8 TRISODIUM PHOSPHATE AND SODIUM HYDROXIDE OR TRISODIUM AND DISODIUM PHOSPHATE IN NEUTRALIZING AND PASSIVATING SOLUTION

8.1 Principle

The trisodium phosphate (Na_3PO_4) is titrated to equivalence point of the first sodium in trisodium phosphate and the equivalence point of sodium hydroxide (NaOH) with hydrochloric acid (HCl) using phenolphthalein indicator. The titration is continued to the equivalence point of the second sodium in Na_3PO_4 using a mixed indicator. This method may be used to analyze solutions of Na_3PO_4 and disodium phosphate (Na_2HPO_4).

8.2 Reagents **8.2.1 Hydrochloric Acid**, 0.05 N.

8.2.2 Mixed Indicator, (*see 4.3.2*).

8.2.3 Phenolphthalein Indicator, see (4.3.4).

8.3 Procedure

8.3.1 Pipette 10 ml of filtered solvent into a 150 ml beaker.

8.3.2 Add 4 drops of phenolphthalein indicator solution and titrate with 0.05 N HCl until colourless. Record the volume (PE).

8.3.3 Add 4 drops of mixed indicator solution and continue titration without refilling the burette to a reddish-grey end point. Record the volume (ME).

8.4 Calculation

8.4.1 Calculate the percent of NaOH and Na₃PO₄ solutions as follows:

$$\text{Excess alkalinity as NaOH, percent} = \frac{[(2 PE - ME) \times N \times 4]}{AS}$$

$$\text{Na}_3\text{PO}_4 \cdot 12\text{H}_2\text{O, percent} = \frac{[(ME - PE) \times N \times 38]}{AS}$$

$$\text{Na}_3\text{PO}_4 \text{ (TSP), percent} = \frac{[(ME - PE) \times N \times 16.4]}{AS}$$

8.4.2 Calculate the percent of Na₃PO₄ and Na₂HPO₄ solution as follows:

When $(2 PE - ME) < 0$ or $ME > 2 PE$, there is no excess NaOH; and

$$\text{Na}_3\text{PO}_4 \text{ (TSP), percent} = \frac{PE \times N \times 16.4}{AS}$$

$$\text{Na}_2\text{HPO}_4 \text{ (DSP), percent} = \frac{[(ME - 2 PE) \times N \times 14.2]}{AS}$$

$$\text{PO}_4^{-3}, \text{ percent} \times 1.65 = (2 \text{ TSP} \times 1 \text{ DSP})$$

$$\text{Total PO}_4, \text{ percent} = \frac{[(ME - PE) \times N \times 9.5]}{AS}$$

$$(2 \text{ TSP} \times 1 \text{ DSP}), \text{ percent} = \frac{[(ME - PE) \times N \times 15.7]}{AS}$$

where

PE = volume of HCl used to obtain the phenolphthalein end point, in ml;

ME = volume of HCl used to obtain the mixed indicator end point, in ml;

N = normality of the HC;

A = volume of sample titrated, in ml; and

S = specific gravity of the sample.

9 TOTAL COPPER IN ACID (IODOMETRIC)

9.1 Principle

The copper in the sample is oxidized with potassium permanganate (KMnO₄) and the excess permanganate reduced with hydrazine sulphate (NH₂NH₂·H₂SO₄). Any iron present is complexed with ammonium bifluoride (NH₄HF₂). Iodine is liberated by reaction of the copper with potassium iodide (KI) in proportion to the amount of copper present, and the free iodine is titrated with standard sodium thiosulphate (Na₂S₂O₃) solution in the presence of a starch indicator.

9.2 Reagents

9.2.1 Ammonium Bifluoride, Crystals.

9.2.2 Hydrazine Sulphate Solution, 150 g/l.

9.2.3 Potassium Iodide, Crystals.

9.2.4 Potassium Permanganate Solution, 20 g/l.

9.2.5 Standard Sodium Thiosulphate Solution, 0.1 N.

9.2.6 Starch Indicator Solution

9.3 Procedure

9.3.1 Pipette an aliquot of the filtered sample into an Erlenmeyer flask containing 25 ml to 50 ml of water. The aliquot should contain enough copper to give a thiosulphate titration of over 5 ml.

9.3.2 Add KMnO₄ solution drop wise until a permanent light pink colour is obtained.

9.3.3 Add hydrazine sulphate solution drop wise until the pink colour disappears. Add 1 drops to 2 drops in excess.

9.3.4 Add 6 g of ammonium bifluoride (NH₄HF₂) to the flask and dissolve it in the sample.

9.3.5 Add 5 g of potassium iodide (KI), stopper the flask, and swirl to dissolve. Allow to stand for about 5 min. The liberated iodine will turn the solution yellow to brown in colour.

9.3.6 Unstoppered the flask and titrate with 0.1 N Na₂S₂O₃ solution until most of the reddish-brown

the reddish-brown colour disappears. Do not titrate to light yellow colour.

9.3.7 Add several drops of starch indicator solution and continue the titration until the purple starch-iodine colour in the solution disappears.

9.3.8 Record the milliliters of $\text{Na}_2\text{S}_2\text{O}_3$ solution used (A).

9.4 Calculation

9.4.1 Calculate the total copper in the sample as follows:

$$\text{Copper, percent} = \left(\frac{AN}{BS} \right) \times 6.4$$

where

A = volume of $\text{Na}_2\text{S}_2\text{O}_3$ solution required for the titration, in ml;

N = normality of $\text{Na}_2\text{S}_2\text{O}_3$ solution,

B = volume of sample titrated, in ml; and

S = specific gravity of the sample.

10 COPPER IN HYDROCHLORIC ACID CONTAINING COPPER COMPLEXORS, INORGANIC ACID AND IN MIXTURES OF ORGANIC ACIDS (PHOTOMETRIC)

10.1 Principle

Copper forms a complex with diethyldithiocarbamate (DEDTC) that can be extracted from aqueous solution with o-dichlorobenzene. The optical density of the yellow coloured complex is proportional to the amount of copper present in the extract.

10.2 Interference

10.2.1 Ferrous iron interference is eliminated by persulphate oxidation and citrate complexation.

10.2.2 Nickel interferes in this method. It reacts the same as copper.

10.3 Apparatus

10.3.1 Photometer

Filter photometer suitable for measurements at a wavelength of 480 nm to 490 nm (acceptable transmittancy measurements can be made in the range from 450 nm to 510 nm). Filter photometers and photometric practices prescribed in this method shall conform to standard recommended practices.

10.4 Reagents

10.4.1 Ammonium Hydroxide, 1 : 1.

10.4.2 Ammonium Persulphate, Crystals.

10.4.3 Citric Acid, 250 g/l.

Dissolve 125 g of acid in water and dilute to 500 ml.

10.4.4 Copper Stock Solution

Dissolve 0.5 g of pure copper wire or sheet in a mixture of 5 ml concentrated nitric acid (sp gr 1.42) and 20 ml of water. Boil to remove nitrous oxide. Cool and dilute to 1 litre with water (1 ml = 0.5 mg Cu).

10.4.5 Copper Standard Solution

Pipette 5 ml of copper stock solution into a 100 ml volumetric flask and dilute to 100 ml with water (1 ml = 0.025 mg Cu).

10.4.6 DEDTC Solution, 2 g/l

Dissolve 1 g of sodium diethyldithiocarbamate and 2 g of disodium ethylenediamine tetra acetate in water and dilute solution to 500 ml.

10.4.7 O-Chlorobenzene ($\text{C}_6\text{H}_4\text{Cl}_2$)

This solvent must be stored in glass. Storage in polyolefin bottles will cause interference in the method.

10.4.8 Hydrochloric Acid, 1 : 1.

10.5 Calibration

10.5.1 Follow the procedure of **10.6.2** to **10.6.5** using appropriate volumes of the standard copper solution (0.025 mg Cu/ml) for the photometer being used. If 1 ml, 2 ml, 3 ml, 4 ml and 5 ml of standard copper solutions are used, the copper concentrations in the 25 ml portions of o-dichlorobenzene will be 1 mg, 2 mg, 3 mg, 4 mg and 5 mg of Cu/l, respectively.

10.5.2 Plot ml of Cu/l on the abscissa and percent transmittance on the ordinate of semi log graph paper.

10.6 Procedure

10.6.1 Pipette 10 ml (V_1) of the filtered sample into a 100 ml volumetric flask. Add 2.5 g of ammonium persulphate and acidify with 20 ml of hydrochloric acid (1 : 1). Heat gently until all effervescence ceases. Then heat to boiling and boil for 2 min, cool, and dilute to 100 ml (V_2) with water.

10.6.2 Pipette an aliquot (V_3) into a 125 ml separating funnel. The aliquot size will depend on the photometer used. From 1 ml to 5 ml should cover the copper concentration ranges from 0.01 to 0.1 percent.

10.6.3 Add 10 ml each of citric acid solution, ammonium hydroxide (1 : 1) and DFDTC solution and mix thoroughly. Let it stand for 2 min.

10.6.4 Add exactly 25 ml (V_4) of o-dichlorobenzene to the separating funnel and shake for 2 min. Allow the layers to separate. Filter the bottom layer through a 19 mm tuft of surgical cotton in a funnel into a photometer cell.

10.6.5 Prepare a reagent blank by following **10.6.2** to **10.6.4** using water for the aliquot (V_3).

10.6.6 Adjust the photometer to 100 percent transmittance with the reagent blank. Measure the transmittance (T, percent) of the sample, using the same or a matched cell, and record it.

10.7 Calculation

10.7.1 Calculate the total copper in the sample as follows:

$$\text{Copper, percent} = \frac{\left[\text{mg} \frac{\text{Cu}}{\text{litre}} \text{ from the curve} \times V_2 \times V_4 \right]}{10\,000 \times S \times V_1 \times V_3}$$

where

V_1 = volume of original sample, in ml;

V_2 = volume of sample after dilution, in ml;

V_3 = volume of diluted sample used in the extraction, in ml;

V_4 = volume of o-dichlorobenzene used to extract V_3 , in ml; and

S = specific gravity of the sample.

11 COPPER IN AMMONIACAL BROMATE AND PERSULPHATE (PHOTOMETRIC)

11.1 Principle

The intensity of the blue tetra amino copper (II) complex is measured and is proportional to the copper concentration in the solvent.

11.2 Apparatus

11.2.1 *Photometer* — suitable for measurement at wavelength 700 nm.

11.3 Reagents

11.3.1 *Ammonium Hydroxide*, 1 : 1.

11.3.2 *Ammonium Persulphate*, Crystals.

11.3.3 Copper Solution Standard

Dissolve 0.500 g of pure copper wire or sheet in a mixture of 5 ml concentrated nitric acid (sp gr 1.42) and 20 ml of water. Boil to remove nitrous oxide. Cool and dilute to 1 litre with water (1 ml = 0.5 mg Cu).

11.4 Procedure

11.4.1 Calibration

Pipette aliquots of the standard copper solution into 25 ml volumetric flasks and proceed to **11.4.4**. The use of 5 ml, 10 ml, 15 ml and 20 ml aliquots of the standard will give solutions containing 0.01 percent, 0.02 percent, 0.03 percent and 0.04 percent copper, respectively.

11.4.2 If filtered samples are still turbid, filter again through a membrane filter (0.45 μm).

11.4.3 Add a measured volume (V_1) of filtered sample to a 25 ml volumetric flask. This volume must have a copper content within the calibration curve range.

11.4.4 Add 5 ml of ammonia (1 : 1) and about 0.1 g of ammonium persulphate to the 25 ml flask and dilute to volume with water. Transfer to a photometer cell.

11.4.5 Adjusted photometer to 100 percent transmittance with a water blank.

11.4.6 Determine the transmittance (T percent) of the sample and record.

11.5 Calculation

11.5.1 Calculate the percent copper in the sample as follows:

$$\text{Copper, percent} = \frac{[\text{Copper, (from curve)} \times 25] V_1 S}{100}$$

where

V_1 = volume of sample used, in ml; and

S = specific gravity of the sample.

12 COPPER IN AMMONIACAL BROMATE AND PERSULPHATE (VOLUMETRIC)

12.1 Principle

The oxidant (bromate or persulphate) in the sample is reduced with sodium sulphite (Na_2SO_3). After acidifying with hydrochloric acid (HCl), the copper in the sample is oxidized with potassium

permanganate (KMnO_4) and the excess permanganate is reduced with hydrazine sulphate ($\text{NH}_2\text{NH}_2\cdot\text{H}_2\text{SO}_4$). Iodine is liberated by the reaction of cupric ion with potassium iodide (KI) in proportion to the amount of copper present. The free iodine is titrated with standard sodium thiosulphate ($\text{Na}_2\text{S}_2\text{O}_3$) solution in the presence of a starch indicator.

12.2 Reagents

12.2.1 Hydrazine Sulphate Solution

12.2.2 Hydrochloric Acid, 1 : 1.

12.2.3 Potassium Iodide, Crystals.

12.2.4 Potassium Permanganate Solution, 10 g/l.

12.2.5 Sodium Sulphite Solution, Saturated.

A saturated solution will contain about 200 g/l.

12.2.6 Standard Sodium Thiosulphate Solution, 0.1 N.

12.2.7 Starch Indicator Solution

12.3 Procedure

12.3.1 Pipette an aliquot of the sample into a 250 ml Erlenmeyer flask containing 30 ml to 50 ml of water. This aliquot should contain enough copper to react with 5 ml to 15 ml of 0.1 N sodium thiosulphate solution.

12.3.2 Add at least 4 ml of saturated Na_2SO_3 solution to the sample for each 1 percent of bromate or persulphate in the original copper solvent. Allow to react for 2 min to 3 min.

12.3.3 Add 5 ml of HCl, 1 : 1. The first portions of the acid should be added drop wise with vigorous shaking until the colour disappears. Add the remaining acid rapidly and allow the sample to react for 2 min to 3 min. Make certain that all sulphur dioxide (SO_2) has been removed.

12.3.4 Add KMnO_4 solution drop wise with vigorous swirling until a permanent light pink colour is obtained.

12.3.5 Add saturated hydrazine sulphate solution drop wise until the solution is clear and then add 1 drop to 2 drops in excess.

12.3.6 Add 1 g to 2 g of KI to the flask, stopper, swirl to mix and let stand for 5 min.

12.3.7 Titrate the solution with the 0.1 N $\text{Na}_2\text{S}_2\text{O}_3$ solution until the brown colour starts to disappear.

12.3.8 Add 10 drops of starch indicator solution and continue the titration until the blue black colour disappears for approximately 30 s.

12.3.9 Read and record the milliliters of $\text{Na}_2\text{S}_2\text{O}_3$ solution used (A).

12.4 Calculation

12.4.1 Calculate the percent copper in the solvent as follows:

$$\text{Copper, percent} = \left(\frac{AN}{BS} \right) \times 6.4$$

where

A = volume of $\text{Na}_2\text{S}_2\text{O}_3$ solution used in the titration, in ml;

N = normality of the $\text{Na}_2\text{S}_2\text{O}_3$ solution;

B = milliliters of sample titrated; and

S = specific gravity of the sample.

13 TOTAL IRON IN ACID (IODOMETRIC)

13.1 Principle

The iron in the sample is oxidized to ferric state using potassium permanganate (KMnO_4). The excess KMnO_4 is reduced with hydrazine sulphate ($\text{NH}_2\text{NH}_2\cdot\text{H}_2\text{SO}_4$). Potassium iodide (KI) is added and the iodine, liberated by reaction of KI with ferric ions, is titrated with standard sodium thiosulphate ($\text{Na}_2\text{S}_2\text{O}_3$) solution.

13.2 Reagents

13.2.1 Hydrazine Sulphate Solution, 150 g/l.

Dissolve 15 g of granular hydrazine sulphate in 100 ml of water.

13.2.2 Hydrochloric Acid, 1 : 1.

13.2.3 Potassium Iodide, Crystals

13.2.4 Potassium Permanganate Solution, 20 g/l.

13.2.5 Standard Sodium Thiosulphate Solution, 0.1 N.

13.2.6 Starch Indicator Solution

13.3 Procedure

13.3.1 Pipette an aliquot of the filtered sample into an Erlenmeyer flask containing 25 ml to 50 ml of water. If iron is being determined in an organic acid solvent, add 5 ml of HCl to the sample. The aliquot should contain sufficient iron to give a titration of 5 ml to 15 ml of $\text{Na}_2\text{S}_2\text{O}_3$ solution.

13.3.2 Add KMnO_4 solution drop wise until a permanent pink colour is obtained.

13.3.3 Add hydrazine sulphate solution drop wise until the pink colour disappears, add 1 drops to 2 drops in excess.

13.3.4 Add approximately 5 g of KI, stopper the flask and swirl to dissolve. Let stand for about 5 min. The liberated iodine will turn the solution yellow to brown in colour.

13.3.5 Unstopper the flask and titrate with 0.1 N $\text{Na}_2\text{S}_2\text{O}_3$ solution until most of the brown colour disappears.

13.3.6 Add several drops of starch indicator solution and continue the titration until the solution is colourless.

13.3.7 Record the milliliters of $\text{Na}_2\text{S}_2\text{O}_3$ solution used (A).

13.4 Calculation

13.4.1 Calculate the total iron in the sample as follows (*see* 13.4.2):

$$\text{Iron, percent} = \left(\frac{AN}{BS} \right) \times 5.5$$

where

A = volume of $\text{Na}_2\text{S}_2\text{O}_3$ solution required for the titration, in ml;

N = normality of the $\text{Na}_2\text{S}_2\text{O}_3$ solution;

B = volume of sample titrated, in ml; and

S = specific gravity of the sample.

13.4.2 If the sample contains copper:

$$\text{Iron, percent} = \frac{[(A - C) N \times 5.5]}{BS}$$

where

C = volume of $\text{Na}_2\text{S}_2\text{O}_3$ solution used to titrate copper in 12.3.9. The same volume must be used for both iron and copper titrations.

14 IRON BY THE THIOGLYCOLTATE METHOD (PHOTOMETRIC)

14.1 Principle

Iron and thioglycollic acid in solutions buffered from pH 9.0 to 10.0 form a red-purple complex, the colour intensity of which is proportional to the concentration of iron in the sample.

14.2 Interferences

The interferences in this method are the organic

components present in some solvents that form strong complexes with the metals in the solution. A procedure to eliminate these interferences is provided.

14.3 Apparatus

14.3.1 *Photometer* — suitable to operate at 540 nm.

14.4 Reagents

14.4.1 *Ammonium Persulphate*

14.4.2 *Buffer Solutions*

Dissolve 33.8 g of ammonium chloride in 100 ml of water and add 285 ml of concentrated ammonium hydroxide. Dilute to 500 ml with water.

14.4.3 *Citric Acid Solution*, 100 g/l.

14.4.4 *Hydrochloric Acid*, 1 : 1.

14.4.5 *Iron Solution Stock*

Dissolve 0.702 g ferrous ammonium sulphate $[\text{Fe}(\text{NH}_4)_2(\text{SO}_4)_2 \cdot 6\text{H}_2\text{O}]$ in water containing 1 ml of concentrated hydrochloric acid and dilute to 100 ml (1 ml = 1 mg of iron).

14.4.6 *Nitric Acid*, 1 : 1.

14.4.7 *Thioglycollate Solution*

Saturate 500 ml of water with 70 g of anhydrous sodium sulphite. Add 30 ml of thioglycollic acid and 50 ml of concentrated ammonium hydroxide.

14.5 Procedure

14.5.1 *Calibration*

14.5.1.1 Pipette appropriate aliquots of standard iron solution (1 ml = 0.1 mg Fe) into 100 ml volumetric flasks. The use of 1 ml, 2 ml, 3 ml, 4 ml and 5 ml of the solution will give standards containing 1 mg, 2 mg, 3 mg, 4 mg and 5 mg Fe/l. To process, follow the procedure starting with 14.5.5.

14.5.1.2 Plot ml of Fe/l on the abscissa and the transmittance (T, percent) on the ordinate of a semi log graph.

14.5.2 If the solvent contains no copper complexes, gluconates, or various ethylenediamine tetra acetate type organics, pipette 5 ml (V_1) of sample into a 100 ml volumetric flask. Add 10 ml of citric acid solution, dilute to 100 ml (V_2) and proceed to 14.5.4.

14.5.3 If the solvent contains organic agents, pipette 5 ml (V_1) of the filtered sample into a 100 ml volumetric flask. Slowly and cautiously, add drop wise 10 ml of HNO_3 . Let stand until all

effervescence ceases. Heat gently and gradually bring the solution to a boil volatilizing all of the nitrous oxide, and continue heating to near dryness; allow the flask to cool. Add 1 g of HCl. The rate of addition will be determined by the vigour of the persulphate organic reaction in the flask. Heat gently after the addition of HCl until the effervescence subsides, then boil for 2 min. Cool and add 10 ml of citric acid solution. Dilute to 100 ml (V_2).

14.5.4 Pipette a 1 ml (V_3) aliquot into a 100 ml flask.

14.5.5 Add 10 ml of buffer solution and 2 ml of Thioglycollate solution and dilute to 100 ml (V_4).

14.5.6 Adjust the photometer to 100 percent transmittance with a water blank.

14.5.7 Measure the transmittance (T, percent) of the sample and record.

14.6 Calculation

14.6.1 Calculate the iron content of the sample as follows:

$$\text{Iron, percent} = \frac{\left[\text{mg } \frac{\text{Fe}}{\text{I}} \text{ from the curve} \times V_2 \times V_4 \right]}{10000 \times S \times V_1 \times V_3}$$

where

V_1 = volume of original sample, in ml;

V_2 = volume of sample after initial dilution, in ml;

V_3 = volume of diluted sample used to test, in ml;

V_4 = volume of sample after final dilution, in ml; and

S = specific gravity of the sample.

15 CALCIUM IN SOLVENTS (VOLUMETRIC)

15.1 Principle

The acidic solvent is treated with activated charcoal to remove organic surfactants and acid inhibitors. An aliquot of the treated solvent is acidified and oxidized with ammonium persulphate, $(\text{NH}_4)_2\text{S}_2\text{O}_8$ or bromine water. Magnesium chloride (MgCl_2) is added to improve titration end point detection. The aliquot is reacted with an excess of EDTA. Triethanolamine and potassium hydroxide (KOH) are added to the solution to raise the pH from 12.5 to 13 and complex the iron in the aliquot. Sodium sulphide-borate buffer is added to complex divalent heavy metals (Cu, Zn). The colour of the solution containing calcium indicator is blue when excess EDTA is present. The excess EDTA is back titrated with calcium standard solution. The

calculation of calcium content is based on the quantity of EDTA required to react with calcium in the aliquot.

15.2 Interference

15.2.1 The major interferences in this method of analysis are di and trivalent metals and phosphates. Triethanolamine is added to complex ferric iron and aluminum. The quantity of iron in the sample being titrated should not exceed 75 mg.

15.2.2 Copper and zinc are removed by the addition of sodium sulphite-borate buffer solution. The quantity of copper in the sample should not exceed 25 mg.

15.2.3 The phosphate ion is prevented from interfering by keeping the amount of un-complexed calcium at a very low level. The phosphate ion is the reason for the back titration method used in the procedure.

15.2.4 The absence of magnesium may be considered an interference in that the indicator will not show consistent colour changes in the absence of magnesium ions.

15.3 Reagents

15.3.1 *Ammonium Persulphate*, crystals.

15.3.2 *Calcium Indicator (Solochrome Dark Blue or Eriochrome Blue Black R)*

Grind 0.1 g of the indicator reagent with 20 g of sodium chloride (NaCl) to a fine powder.

15.3.3 *Standard Calcium Solution*

Dissolve 2.75 g of CaCO_3 in a minimum of hydrochloric acid (HCl) (1 : 1) and boil gently to remove carbon dioxide (CO_2). Add a few drops of methyl red indicator solution. Add diluted KOH solution (300 g KOH/l diluted 1 : 19) until just alkaline to methyl red. Add HCl (1 : 9) until just acid to methyl red. Dilute to 1 litre with water and standardize, store in a glass or plastic bottle (1 ml = 1.00 mg Ca).

15.3.4 *Activated Charcoal (Calcium and Magnesium Free)*

Slurry activated charcoal in HCl (1 : 1). Heat to near boiling and filter while hot. Wash several times with hot water. Test the filtrate after each washing with pH paper until washings show no acid. Dry the treated charcoal thoroughly at 120 °C. Grind to a fine powder and store in a plastic or glass bottle.

15.3.5 Standard EDTA Solution

Dissolve exactly 9.316 g of disodium ethylenediamine tetra acetate dehydrate powder in 800 ml of water and dilute to 1 litre.

15.3.6 Hydrochloric Acid, 1 : 1.**15.3.7 Magnesium Chloride (40 g/l)**

Dissolve 4 g of magnesium chloride ($\text{MgCl}_2 \cdot 6\text{H}_2\text{O}$) in water and dilute the solution to 100 ml.

15.3.8 Methyl Red Indicator**15.3.9 Sodium Sulphide - Borate Buffer Solution**

Prepare as follows:

Dissolve 40 g of sodium tetra borate ($\text{Na}_2\text{B}_4\text{O}_7 \cdot 10\text{H}_2\text{O}$) in 800 ml of water. Dissolve 10 g each of sodium hydroxide, sodium sulphide and potassium sodium tartrate ($\text{KNa C}_4\text{H}_4\text{O}_6 \cdot 4\text{H}_2\text{O}$) in 100 ml of water. When cool, mix the two solutions and add 1 g of magnesium ethylene diamine tetra acetate, having a ratio of 1 Mg : 1 EDTA. Complex any excess magnesium with standard sodium ethylene diamine tetra acetate solution (1 ml = 1.0 mg CaCO_3), if necessary. Make up to 1 litre with water. Keep the solution bottle stoppered when not in use. The reagent will be effective for at least one month.

15.3.10 Potassium Hydroxide Solution, 300 g/l.**15.3.11 Triethanolamine Solution, 250 g/l.****15.4 Procedure****15.4.1 Standardization**

15.4.1.1 This procedure is used to determine the calcium content of the solution prepared in **15.3.3** and the dilution required for a calcium standard having 1 ml = 1.00 mg Ca.

15.4.1.2 From a burette, add 10 ml of calcium solution to a 400 ml beaker and add 100 ml of water. Do not refill the burette.

15.4.1.3 From a burette, add 15 ml of EDTA titrant.

15.4.1.4 Add 1 ml of magnesium solution, 15 ml each of triethanolamine and KOH solution, 1 ml to 1.5 ml of sodium sulphide-borate buffer solution and mix. Check the pH electrometrically. The pH must be between 12.5 and 13. If the pH is less than 12.5, adjust upward with KOH solution. If greater than 13, discard and repeat **15.4.1.2** using less KOH solution and adjusting the pH upward, if necessary.

15.4.1.5 Add 0.05 g of calcium indicator. Titrate slowly with calcium solution to the end point. Continuous stirring is required for this titration. The colour change is from blue through purple near end point to pure red at the end point. Record the total volume (A) of calcium solution used.

15.4.1.6 Fifteen milliliters of EDTA solution should be equivalent to 15 ml of calcium standard. To prepare 500 ml of standard with (1 ml = 1 000 mg Ca) dilute ($\frac{300 \cdot A}{15}$) ml of calcium solution to 500 ml with water where A = 1 ml of calcium solution used in the titration.

15.4.2 Add approximately 3 g of calcium and magnesium-free activated charcoal to approximately 100 ml of sample. Agitate with a magnetic stirrer for at least 10 min. Filter through a 0.45 μm membrane filter.

15.4.3 Pipette 50 ml (V_1) of the filtrate into a 250 ml volumetric flask. Add 20 ml of HCl (1 : 1) and either 2 g of ammonium persulphate or approximately 30 ml of saturated bromine water. Boil for at least 10 min or until all bromine has been expelled if bromine water was used as the oxidant. Cool and dilute to 250 ml (V_2) with water.

15.4.4 Pipette an aliquot (V_3 , Ca) of dilute solution prepared in **15.4.3** into a 400 ml beaker (25 ml aliquot has generally proven adequate on field samples). Add approximately 100 ml of water. The aliquot should contain less than 75 mg of iron and calcium ions equivalent to 10 mg to 20 mg of EDTA standard.

15.4.5 All additions from this point in the procedure should be made with continuous stirring. A magnetic stirring device is recommended. From a burette, add a volume of EDTA titrant, for example, 20 ml, sufficient to complex calcium in the aliquot plus 5 ml to 8 ml excess. Do not refill the burette. Record as ml EDTA (1).

15.4.6 Add 1 ml of magnesium solution, 15 ml each of triethanolamine and KOH solution, and 1 ml to 1.5 ml of sodium sulphide-borate buffer solution. Check the pH with a pH meter. The pH must be between 12.5 and 13, adjust upward with KOH solution. If greater than 13, discard and repeat **15.4.4** and **15.4.5**, using less KOH solution and adjusting the pH upward as required.

15.4.7 Add 0.05 g of calcium indicator and titrate slowly with calcium standard to near the end point (blue through purple near the end point to pure red at the end point). The solution should be clear blue

prior to titration with calcium titrant. If the colour is not clear blue, add EDTA titrant until the solution turns blue. Then add 5 ml excess. As the end point is approached, add calcium standard in 2-drop increments, waiting between each addition to observe the colour change. Note the burette reading after each addition. The correct end point reading is that reading prior to the last two drops addition that produces no further colour change. Record this reading as ml Ca (1). Subtract this value from ml EDTA (1) in **15.4.5**. Record the difference as Ca (1). Do not refill the burette.

NOTE — Near the end point, the magnesium hydroxide $[Mg(OH)_2]$ floc will suddenly adsorb a large portion of the indicator dye and thereby become visible. If the floc is allowed to settle, it will be coloured a definite blue if unreacted EDTA is present and red in the presence of very slight excess of calcium.

15.4.8 Continue the titration with EDTA blue. Add about 0.5 ml additional and record this new reading as ml EDTA (2).

15.4.9 Allow about 10 s of time to elapse and resume titration with calcium standard to a red point as in **14.4.7** to obtain a [1 ml Cu (2)] value. Subtract [ml Ca (2)] from [1 ml EDTA (2)] to obtain a Ca (2) value.

15.4.10 Repeat **15.4.8** and **15.4.9** once or twice more if a more reliable average is desired. Average the separate Ca (n) values and record as Ca (av). Reject any Ca (n) value that differ from the average by more than 0.20 ml. Use the remaining values to recalculate a new average.

15.5 Calculation

15.5.1 Calculate calcium content of the sample as follows:

Calcium, percent =

$$(V_2 \times 0.1 \times Ca(av)) / [V_1 \times (V_3Ca) \times S]$$

where

V_1 = volume of original aliquot diluted to V_2 in **15.4.3**, in ml;

V_2 = volume to which V_1 was diluted, in ml;

V_3, Ca = volume of V_2 used in titration, in ml;

Ca (av) = average volume of EDTA that reacted with calcium in the sample (ml EDTA standard - ml calcium standard), in ml obtained in **15.4.5** through **15.4.10** inclusive; and

S = specific gravity of the sample.

15.5.2 The above equation is valid only when the EDTA titrant and calcium standard titres are equivalent and equal to 1.00 mg Ca/ml. If the EDTA titrant and calcium standard do not contain the equivalent of 1.00 mg Ca/ml, the following correction should be made in calculating ml Ca in **15.4.5** through **15.4.10** inclusive.

$$[ml\ EDTA\ (I)] =$$

$$(ml\ EDTA\ added) \times (mg\ Ca/ml\ EDTA)$$

$$[ml\ Ca\ (1)] =$$

$$(ml\ calcium\ added) \times (mg\ Ca/ml\ calcium\ standard)$$

16 MAGNESIUM IN ACID SOLVENTS (VOLUMETRIC)

16.1 Principle

The acidic solvent is treated with activated charcoal to remove the surfactant and acid inhibitors. An aliquot of the treated solvent is acidified and oxidized with ammonium persulphate $(NH_4)_2S_2O_8$ or bromine. Tartaric acid is added to complex iron and the pH is adjusted with ammonium hydroxide (NH_4OH) . Excess of EDTA standard solution is added. The solution is buffered to pH 10 and triethanolamine and sodium sulphide-borate buffer solutions are added. The pH is again adjusted to 10.0 to 10.2 with potassium hydroxide (KOH). Eriochrome Black T indicator is added and the excess EDTA is back titrated with a standard calcium solution. The calculation of magnesium content is based on difference in quantities of EDTA required to react with (1) calcium plus magnesium and (2) calcium in the sample.

16.2 Interference

The interferences for the combined calcium and magnesium determination are the same as those defined in the calcium procedure (see **15.2.1** to **15.2.3**).

16.3 Reagents

16.3.1 Ammonium Hydroxide, sp gr 0.90.

16.3.2 Ammonium Persulphate, crystals.

16.3.3 Buffer Solution, (see **15.3.9**).

16.3.4 Standard Calcium Solution (1 ml = 1.00 mg Ca)

16.3.5 Standard EDTA Solution (1 mg = 1 mg of calcium)

16.3.6 Eriochrome Black T indicator**16.3.7 Hydrochloric Acid (1 + 1)****16.3.8 Methyl Red Indicator****16.3.9 Potassium Hydroxide Solution, 300 g/l.****16.3.10 Tartaric Acid, crystal****16.4 Procedure****16.4.1** Standardize as given in **15.4.1**.

16.4.2 Pipette an aliquot (V_3 , Ca + Mg) of the sample treated as in **15.4.3** into a 400 ml breaker (25 ml aliquot has generally proven adequate on field samples). Add approximately 100 ml of water, 3 drops to 4 drops of methyl red indicator solution, and 1 g of tartaric acid. The aliquot should contain less than 75 mg of iron and a quantity of calcium plus magnesium equivalent to 10 ml to 25 ml of EDTA standard.

16.4.3 All additions from this point in the procedure should be made with continuous stirring. A magnetic stirring device is recommended. Add from a burette, a volume of EDTA titrant sufficient to complex the calcium and magnesium and give an excess of 5 ml to 8 ml. Do not refill the burette.

16.4.4 Add 15 ml of triethanolamine solution. Add NH_4OH until alkaline to methyl red and 2 ml to 3 ml in excess. Then add 1 ml to 1.5 ml of sulphide-borate buffer solution.

16.4.5 With a pH meter, adjust the pH to 10.0 to 10.2 with KOH solution. About 2 ml of 300 g/l KOH solution should suffice.

16.4.6 Add about 0.05 g of Eriochrome Black T indicator powder. This amount of indicator will give optimum depth of colour in which slight changes in at colour and near the end point are most discernible. Too large amount of indicator should be avoided. At this point in the determination, the colour should be clear blue or blue green. If insufficient EDTA is present to completely complex the calcium and magnesium present, the colour will be red or blue tinged with red. If this should occur, add a measured additional amount of EDTA titrant to give an excess.

16.4.7 From a second burette, titrate slowly with standard calcium to a definite red colour. Add 4 drops to 5 drops in excess and record the calcium titrant volume [ml Ca (1)]. Do not refill the burette.

16.4.8 Resume the titration with EDTA titrant. Add

titrant slowly near the end point. When close to the end point, add the EDTA by 2 drop increments, noting the reading on burette after each addition. The correct end point is that reading noted prior to the last 2 drop addition that produces no colour change. Record as [ml EDTA (1)]. Subtract [ml Ca (1)] to obtain (Ca + Mg) (1).

16.4.9 Without refilling the burette, add about 1 ml of additional EDTA titrant. Change to the second burette and add slowly sufficient calcium titrant to obtain a red end point and then a few drops in excess. Record this second reading as [ml Ca (2)].

16.4.10 Without refilling the burette, continue the titration with EDTA titrant to a second end point recorded as [ml EDTA (2)]. Subtract [ml Ca (2)] from this value to obtain (Ca + Mg) (2).

16.4.11 Repeat **16.4.9** and **16.4.10** once or twice more if a more reliable average (Ca + Mg) values and record as (Ca + Mg) (av). Reject any (Ca + Mg) value that differs from the average by more than 0.20 ml. Use the remaining values to calculate a new average.

16.5 Calculation

16.5.1 Calculate the magnesium content of the sample as follows:

$$\text{Magnesium, percent} = \frac{V_2 \times [(Ca + Mg)(av) - Ca(av)] \times 0.06}{V_1 \times V_3 (Ca + Mg) \times S}$$

where

V_1 = volume of sample diluted to V_2 , in ml, in 16.4.3;

V_2 = volume to which V_1 was diluted, in ml, 16.4.3;

V_3 = (Ca + Mg) volume of diluted sample titrated in the procedure, in ml;

(Ca + Mg) (av) = volume of EDTA standard solution that reacted with the Ca + Mg in ml, in **16.4.9**, **16.4.10** and **16.4.11**;

Ca(av) = milliliters of EDTA solution standard that reacted with calcium in the aliquot (V_3) as determined in 14.4.8 (V_3 , Ca in 14.4.4 must be the same volume as V_3 , Ca + Mg in 15.4.2); and

S = specific gravity of the sample.

17 SILICA IN ACID AND ALKALINE SOLVENTS (GRAVIMETRIC)

17.1 Principle

Silicon compounds in the solvent are concentrated and precipitated as partially dehydrated SiO_2 by evaporation with hydrochloric acid (HCl). Dehydration is completed by ignition, and silica is volatilized as silicon tetra fluoride (SiF_4).

17.2 Interferences

The anions and cation generally found in cleaning solvents do not interfere.

17.3 Reagents

It is recommended that all reagents given below be stored in polyethylene bottles.

17.3.1 Methyl Orange Indicator

Dissolve 0.1 g of methyl orange in distilled water and dilute to 1 litre.

17.3.2 Concentrated Hydrochloric Acid

17.3.3 Dilute Hydrochloric Acid

Dilute 2 volumes of concentrated hydrochloric acid with 98 volumes of distilled water.

17.3.4 Concentrated Sulphuric Acid

17.3.5 Hydrofluoric Acid, 48 percent (m/m) to 51 percent (m/m).

17.4 Procedure

17.4.1 Test the sample with methyl orange indicator. If the sample is alkaline to methyl orange, add to a volume of the sample containing not less than 5 mg of silica (as SiO_2) sufficient concentrated hydrochloric acid to neutralize it and provide a 5 ml excess of the acid. If the sample is originally acid to methyl orange, add only 5 ml of concentrated hydrochloric acid without any neutralization. Evaporate the acidified sample to approximately 100 ml in a 400 ml, scratch-free, low-form, chemically resistant glass beaker (*see Note*) on a water bath or hot-plate, under a fume hood. Add 5 ml of hydrochloric acid and continue to evaporate the sample to dryness in a water-bath with periodic additions of three more 5 ml increments of hydrochloric acid. Dry the evaporated residue in an oven at 110 °C for 1 h.

NOTE — If the silica content is so low that a very large quantity of the sample has to be evaporated, do not increase the size of the beaker but periodically replenish the evaporating

liquid with increments from the acidified sample reservoir.

17.4.2 Add 5 ml of hydrochloric acid and then 50 ml of water to the dried residue in the beaker, warm the beaker and its

Contents and stir the mixture with a rubber policeman to dissolve or suspend all of the residue. Filter the warm solution through an ash less medium texture paper. Wash the residue on the paper fifteen times with 1 : 49 hydrochloric acid and then with several small increments of water. Cover the funnel containing the paper and its residues with a clean watch glass and reserve it for later ignition.

17.4.2.1 Return the filtrate from **17.4.2** to the original evaporating beaker, and evaporate to dryness on a water-bath with periodic additions of two 5 ml increments of hydrochloric acid. Dry and repeat the filtration and washings described in **17.4.2** using a second funnel and filter paper. Place both the filter papers with their dehydrated residue in a weighed platinum crucible, dry and char the paper without flaming it and then ignite the charred residue for 30 min at 1 000 °C to 1 200 °C. Cool in a desiccator and weigh. Repeat ignition until a constant mass is obtained (W_1).

17.4.3 To the weighed residue, add several drops of concentrated sulphuric acid and 5 ml of hydrofluoric acid and evaporate to dryness on a low-temperature hot-plate or water-bath under a fume hood. Re-ignite the residue at 1 000 °C to 1 200 °C to constant mass (W_2).

17.4.4 Carry out a blank by making an identical determination on the quantity of distilled water required for washing and diluting in **17.4.2** and **17.4.2.1**.

17.5 Calculation

$$\text{Silica (as SiO}_2\text{), mg/l} = \frac{(W_1 - W_2) - (W_3 - W_4)}{V}$$

where

W_1 = mass in mg of the residue obtained in **17.4.2**;

W_2 = mass in mg of the residue obtained in **17.4.3**;

W_3 = mass in mg of the residue before treatment with hydrofluoric acid in **17.4.4**;

W_4 = mass in mg of the residue after treatment with hydrofluoric acid in **17.4.4**; and

V = volume of the sample taken for the test, in ml.

18 SILICA IN ALKALINE PHOSPHATE SOLUTIONS (PHOTOMETRIC)

18.1 Principle

The phosphate in the solvent is precipitated with zinc after acidification of the sample. The surfactants in the solvent are removed with activated charcoal. Ammonium molybdate is added and the blue silicomolybdate colour is developed with amino naphthol sulphonic acid and is proportional to the soluble reactive SiO_2 concentration in the solvent.

18.2 Interferences

18.2.1 The primary interference of this method is the high ratio of phosphate ion concentration to the low SiO_2 concentration. These solvents may contain as high as 1 percent alkaline phosphates while the maximum SiO_2 is somewhat less than 100 mg of SiO_2 /l (0.1 percent SiO_2). The interference is largely overcome by precipitation of the phosphates.

18.2.2 The various surfactants used in these solvents change the silicomolybdate colour reaction.

18.2.3 Some of the SiO_2 , is adsorbed on zinc phosphate and activated charcoal in the preparatory steps. This can be minimized by thoroughly washing the charcoal and precipitate.

18.2.4 The volumetric glassware and pipettes should be thoroughly acid leached prior to use in this SiO_2 procedure. The chemicals used must contain very low concentrations of silica. This interference may be detected by running a blank.

18.3 Apparatus

18.3.1 Filter Photometer

Filter photometer suitable for measurement at a wavelength of 815 nm. Acceptable measurements can be made in the range 640 nm to 700 nm, however, with some sacrifice in precision.

18.4 Reagents

18.4.1 Amino Naphthol—Sulphuric Acid Solution

18.4.2 Ammonium Molybdate Solution, 100 g/l.

18.4.3 Charcoal, Activated, Silica Free

Weigh 50 g of activated charcoal into a 1 litre polyethylene bottle. Add 25 g ammonium bifluoride ($\text{NH}_4 \text{HF}_2$) crystals and fill two thirds full with hydrochloric acid [HCl , 1 part concentrated HCl (sp gr 1.19) + 3 parts water)]. Stir with a magnetic stirrer for at least 2 hours. Filter through a plastic

Buchner funnel with a highly retentive filter paper. Wash with water several times until the filtrate is free of chlorides. Dry the treated charcoal overnight at 160 °C. Grind to a fine powder, if necessary.

18.4.4 Hydrochloric Acid, 1 : 1.

18.4.5 Oxalic Acid, 100 g/l.

18.4.6 Phenolphthalein Indicator Solution, 10 g/l.

18.4.7 Stock Solution, Silica

Dissolve 4.73 g sodium metasilicate nanohydrate ($\text{Na}_2\text{SiO}_3 \cdot 9\text{H}_2\text{O}$) in recently boiled and cooled water and dilute to 1 litre. Store in a plastic bottle. (1 ml = 1 mg of SiO_2).

18.4.8 Standard Solution of Silica

Dilute 20 to 1 litre with water (1 ml = 0.02 mg SiO_2).

18.4.9 Zinc Oxide Powder

18.4.10 Zinc Sulphate Solution, 150 g/l.

18.5 Procedure

18.5.1 Calibration

Pipette appropriate aliquots of the standard silica solution into 50 ml volumetric flasks. The use of 1 ml, 2 ml, 3, ml, 4 ml and 5 ml aliquots will give standards containing 0.4 mg/l (ppm), 0.8 mg/l (ppm), 1.2 mg/l (ppm), 1.6 mg/l (ppm) and 2.0 mg/l (ppm) of SiO_2 , respectively.

18.5.1.1 Add water to each flask to bring the volume up to about 25 ml. Add 2 ml of HCl and 2 ml of ammonium molybdate solution.

18.5.1.2 Proceed with **18.5.2.4** to **18.5.2.6**.

18.5.1.3 Plot milligrams per liter (ppm) SiO_2 on the abscissa and percent transmittance (T, percent) on the ordinate of a semilog graph paper.

18.5.2 Procedure

Pipette 25 ml (V_1) of sample into a 150 ml beaker. Add 2 drops of phenolphthalein indicator solution. Add HCl drop wise until colourless and 5 drops in excess. Add 10 ml of zinc sulphate solution, 0.25 g of activated charcoal, and 0.5 g of zinc oxide powder. Heat to boiling. Filter through a highly retentive paper, while hot. Collect the filtrate in a 100 ml, stoppered, graduated cylinder.

18.5.2.1 Add 20 ml of water to the original beaker, heat to boiling, and wash down the filter with the hot water. Repeat this operation until about 80 ml of filtrate has been collected in the cylinder.

18.5.2.2 Dilute to 100 ml (V_2) with water.

18.5.2.3 Pipette a 25 ml (V_3) aliquot into a 50 ml volumetric flask. Add 2 ml of HCl and 2 ml of ammonium molybdate solution.

18.5.2.4 After 5 min, add 2 ml of oxalic acid solution.

18.5.2.5 After 5 min, add 2 ml of amino naphthol sulphonic acid solution. Dilute to 50 ml (V_4) with water.

18.5.2.6 After 5 min, transfer the solution to a photometer cell and measure the transmittance (T, percent) using a water blank, and record.

18.5.3 Calculation

18.5.3.1 Calculate the SiO_2 content of the solvent as follows:

$$\text{SiO}_2, \frac{\text{mg}}{\text{l}}, \text{ppm} =$$

$$\text{SiO}_2, (\text{graph}) \times (V_2/V_1) \times (V_4/V_3)$$

where

V_1 = volume of sample, in ml;

V_2 = volume of diluted sample, in ml;

V_3 = volume of diluted sample used in the test, in ml; and

V_4 = volume of final aliquot, in ml.

19 HYDRAZINE IN PASSIVATING SOLUTIONS (VOLUMETRIC)

19.1 Principle

Hydrazine is reacted with alkaline permanganate to form manganese dioxide (MnO_2). The MnO_2 is reacted with an excess of oxalic acid under acidic conditions. The excess oxalic acid is titrated with permanganate under acidic conditions.

19.2 Interferences

Hydrazine will react with oxygen when hot and exposed to the air. To minimize hydrazine loss, the sample should be taken by filling a bottle to overflowing, sealing it, and cooling to ambient temperature or below as quickly as possible. The analysis should be made as soon as possible after collecting (within 2 h).

19.3 Reagents

19.3.1 Oxalic Acid Solution, 20 g/l.

19.3.2 Standard Potassium Permanganate Solution, 0.1 N.

19.3.3 Sodium Hydroxide Solution, 50 g/l.

19.3.4 Sulphuric Acid (1 : 1)

19.4 Procedure

Pipette an aliquot of the filtered sample into a 250 ml Erlenmeyer flask. Adjust the volume with water to approximately 50 ml. Suggested aliquot for 100 mg/l of hydrazine is 25 ml, for 300 mg/l, 10 ml, and for 500 mg/l, 5 ml.

19.4.1 Add 2 ml of NaOH solution, mix, and titrate with 0.1 N KMnO_4 solution until a reddish tint is visible over the brown precipitate of MnO_2 . Add 2.0 ml of oxalic acid solution and 5 ml of H_2SO_4 to the solution. Heat to 70 °C. The solution becomes colourless. If the solution does not clear up, add more oxalic acid and heat. Titrate with more KMnO_4 solution until a pink colour persists for 1 min. Record the milliliters of KMnO_4 solution used (V_1).

19.4.2 Add the same volume of oxalic acid solution that was added in **19.4.1** to the solution. Continue the titration with KMnO_4 solution as before, without refilling the burette. Record this total titration volume (V_2) required for the sample plus the two additions of oxalic acid.

19.5 Calculation

19.5.1 Calculate the hydrazine content of the sample as follows:

$$\text{N}_2\text{H}_4, \text{mg/l} = (2V_1 - V_2) N \times 8000/A$$

where

V_1 = volume of KMnO_4 solution required for sample + oxalic acid solution added in **19.4.1**, in ml;

V_2 = volume of KMnO_4 solution required for sample + twice the volume of oxalic acid added in **19.4.1** as determined in **19.4.2**, in ml;

N = normality of the KMnO_4 solution; and

A = volume of sample titrated, in ml.

20 CHROMIC ACID (VOLUMETRIC)

20.1 Principle

The oxidizing capacity of CrO_3 is reduced with a known excess of reducing agent (ferrous ammonium sulphate). The excess is titrated against a standard oxidant (dichromate) using diphenylamine indicator.

20.2 Reagents

20.2.1 Diphenylamine Indicator Solution, 10 g/l.

20.2.2 Ferrous Ammonium Sulphate Solution, 0.3 N**20.2.3 Potassium Dichromate Solution, 0.3 N.****20.2.4 Titrating Acid**

Mix 150 ml each of concentrated sulphuric acid and 70 percent phosphoric acid. Slowly add the mixed acid to 200 ml of water.

20.3 Procedure

Pipette an aliquot (C) of the filtered CrO_3 solution into a 250 ml Erlenmeyer flask. Add approximately 100 ml of water. This aliquot should contain sufficient CrO_3 to react with approximately 5 ml of ferrous ammonium sulphate solution.

20.3.1 Pipette 10 ml (A) of ferrous ammonium sulphate solution into the Flask and add 20 ml of titrating acid.

20.3.2 Add 3 drops of diphenylamine indicator solution. The colour of the solution at this point should be blue-green. If the colour changes to a dark violet upon addition of the indicator solution, insufficient ferrous ammonium sulphate solution was added in **20.3.1**. Add an additional 5 ml of ferrous ammonium sulphate solution. Volume A will now be 15 ml.

20.3.3 Titrate the contents of the flask with 0.3 N potassium dichromate solution to a dark violet end point that remains for 10 s. Record the volume of potassium dichromate solution used (B).

20.4 Calculation

20.4.1 Calculate the percent CrO_3 in the solvent as follows:

$$\text{CrO}_3, \text{percent} = (A - B) N \times 3.33 / CS$$

where

A = volume of ferrous ammonium sulphate solution added, in ml;

B = volume of potassium dichromate solution used for titration, in ml;

N = normality of the potassium dichromate solution;

C = volume of sample titrated, in ml; and

S = specific gravity of the sample.

21 AMMONIUM BIFLUORIDE OR HYDROFLUORIC ACID CONTENT**21.1 Principle**

The method exposes a glass surface to the solvent

under specified conditions and the resulting dissolution of the glass is proportional to the quantity of fluoride ion from the ammonium bifluoride or hydrofluoric acid present. The weight loss of the glass is used to determine the percent ammonium bifluoride or hydrofluoric acid from previous calibration data.

21.2 Reagents and Equipment**21.2.1 Plastic Containers**

Polyethylene or other plastic bottles or beaker. The containers must be at least 25 mm in diameter and shall hold at least 150 ml. The depth of the solvent must be at least 75 mm. A plastic cover, cap, or watchglass is required.

21.2.2 Glass Slides, 75 by 25 mm, microscope slides.

21.2.3 Acetone**21.2.4 Absorbent—Type Paper Tissues**

21.2.5 Analytical Balance, Capable of weighing to 0.1 mg.

21.2.6 Constant Temperature Bath, 66 °C.

21.3 Calibration and Standardization

21.3.1 Prepare the solvent without the fluoride component.

21.3.1.1 For ammonium bifluoride solvents, weigh the amounts of ammonium bifluoride required to obtain the ammonium bifluoride concentration range desired and add to 1.50 ml of the fluoride-free solvent, that is, 5 percent HCl — 10 percent HCL.

21.3.1.2 Follow steps **21.3.3.1** to **21.3.3.3** and **21.3.3.5** in the procedure.

21.3.1.3 Draw a graph of grams weight loss of the glass slide versus ammonium bifluoride concentration or prepare a numerical table.

21.3.2 For hydrofluoric acid solvents, pipette or weigh the volume of hydrofluoric acid required into a plastic graduated cylinder and dilute to 150 ml. If other components are in the hydrofluoric acid solvent, prepare a concentrate of the other components such that 100 ml will contain proper concentrations when diluted to 150 ml. Pour 100 ml of this concentrate into a plastic graduated cylinder. Add the quantity of hydrofluoric acid needed for the concentrations desired. Dilute with water to 150 ml. Follow **21.3.1.2** and **21.3.1.3**.

21.3.3 Procedure

21.3.3.1 Transfer 150 ml of freshly shaken solvent to a plastic bottle. Cover with a plastic cover, cap, or watch glass. Preheat in a 66 °C bath for 30 min.

21.3.3.2 Clean a standard glass microscope (25 by 75 mm) with acetone and wipe with absorbent-type paper tissue and weigh on an analytical balance to the nearest 0.1 mg.

21.3.3.3 Immerse the microscope slide completely in the preheated solution for 1 h.

21.3.3.4 Return the heated sample to the original container if desired for further testing.

21.3.3.5 Wash the watch glass in hot water and dry with acetone and paper tissue. Let cool to room temperature. Reweigh the glass slide and calculate the weight loss in grams.

21.4 Calculation

Read the percent ammonium bifluoride direct from Table 2.

NOTE — The determination of hydrofluoric acid content of the solvent can be obtained from the ammonium bifluoride content. Hydrofluoric acid percent-ammonium bifluoride $\times 0.70$.

22 FLUORIDE IN ALKALINE PHOSPHATE CLEANING SOLUTIONS (POTENTIOMETRIC)

22.1 Principle

The fluoride specific ion electrode develops a

potential proportional to the logarithm of fluoride ion activity in the sample.

22.2 Interferences

Hydroxide ion interferes with the fluoride specific ion electrode response at pH of 9.5 or above. This interference is eliminated by adjusting the pH of the sample to neutral values. The interference can be avoided by adding TISAB (Total Ionic Strength Adjusting Buffer) which buffers the sample at a pH 5 to 5.5.

22.3 Apparatus**22.3.1 pH Meter****22.3.2 Fluoride Ion Activity Electrode****22.3.3 Single Junction Reference Electrode**

22.3.4 Plot Paper, 10 percent volume corrected (Gran).

22.4 Reagents

22.4.1 Acetic Acid Solution, 6 M.

22.4.2 Fluoride Solution, 0.200 M.

Dissolve 8.398 g sodium fluoride in water and dilute to 1 litre with water. Store in plastic containers.

22.4.3 Fluoride Working Solution

Dilute 10 ml of fluoride solution (**22.4.2**) to 1 litre with water.

22.4.4 Mixed Indicator Solution

Prepare by dissolving 0.05 g of bromocresol green in 50 ml of rectified spirit and 0.075 g of methyl red in 50 ml of rectified spirit. Mix these two solutions well.

22.4.5 TISAB Solution (Tonic Strength Buffer Solution)

Dissolve 58 g of sodium chloride and 0.30 g of sodium citrate in 500 ml of water. Add 50 ml of glacial acetic acid (sp gr 1.05). While cooling, add 20 percent of sodium hydroxide until the pH is between 5.0 and 5.5. Cool to ambient temperature and dilute to 1 litre with water. This solution has a limited shelf life.

22.5 Standardization

22.5.1 Pipette 50 ml aliquot of TISAB solution into a 200 ml plastic beaker. Add 50 ml of water.

22.5.2 Insert electrodes and stir to mix. A magnetic stirrer is preferred. Exercise care to prevent bubbles from being trapped on electrode surfaces.

22.5.3 With the pH meter in millivolt mode, allow the readings to stabilize, generally 3 min to 5 min, and record the potential.

22.5.4 Add 1 ml of working fluoride solution (2.0×10^{-3} M) and record the resultant potential.

22.5.5 Repeat 21.5.4 until 6 additions have been made.

22.5.6 Remove electrodes from solution, rinse well with water, and dry with tissue paper. Store electrodes in water.

Table 2 Conversion Table : Grams Loss (Glass Slide) to Percent Available ABF*
(Clause 21.4)

SI No.	Gram Loss	Percent ABF*	Gram Loss	Percent ABF*	Gram Loss	Percent ABF*
(1)	(2)	(3)	(4)	(5)	(6)	(7)
i)	0.001	0.03	0.079	0.56	0.240	2.46
ii)	0.002	0.05	0.083	0.58	0.250	2.46
iii)	0.003	0.08	0.088	0.60	0.260	2.55
iv)	0.004	0.09	0.094	0.62	0.270	2.60
v)	0.005	0.10	0.100	0.63	0.280	2.65
vi)	0.006	0.11	0.104	0.68	0.290	2.69
vii)	0.008	0.12	0.108	0.70	0.300	2.74
viii)	0.010	0.14	0.112	0.72	0.310	2.79
ix)	0.015	0.18	0.116	0.74	0.320	2.83
x)	0.020	0.22	0.121	0.76	0.330	2.88
xi)	0.024	0.25	0.125	0.78	0.340	2.93
xii)	0.029	0.28	0.129	0.80	0.350	2.87
xiii)	0.031	0.30	0.133	0.82	0.360	3.02
xiv)	0.034	0.32	0.138	0.85	0.370	3.06
xv)	0.038	0.34	0.142	0.86	0.380	3.11
xvi)	0.041	0.36	0.146	0.88	0.390	3.15
xvii)	0.044	0.38	0.150	0.90	0.400	3.20
xviii)	0.048	0.40	0.160	0.95	0.410	3.24
xix)	0.052	0.42	0.170	0.99	0.420	3.29
xx)	0.056	0.44	0.180	1.04	0.430	3.33
xxi)	0.059	0.46	0.190	1.09	0.440	3.38
xxii)	0.063	0.48	0.200	1.13	0.450	3.42
xxiii)	0.067	0.50	0.210	1.18	0.460	3.47
xxiv)	0.071	0.52	0.220	1.22	0.470	3.51
xxv)	0.075	0.54	0.230	1.27	0.480	3.56

*ABF ammonium bifluoride.

22.5.7 Determine the apparent amount of fluoride in the blank by plotting the values obtained in **22.5.3**, **22.5.4** and **22.5.5**. Using gran's plot paper, plot the millivolts on the ordinate and the milliliters of 2.0×10^{-3} M fluoride solution added on the abscissa. Place the ordinate to allow space for an extrapolated intercept. Draw the best straight line through the last four or five points. Extend this line through the ordinate to intercept the abscissa. The value of this intercept is the milliliters of 2.0×10^{-3} M fluoride solution necessary to equal the apparent amount of fluoride present in the blank.

22.5.7.1 At the lower limits of the determination range, the response of the electrode may vary from a straight-line curve. Therefore, the readings obtained from the first few additions may vary from the straight line obtained from using the last four or five readings.

22.6 Procedure

22.6.1 Pipette an aliquot, generally 50 ml, of the sample into a 200 ml plastic beaker. While stirring, add 4 drops of mixed indicator and acetic acid solution drop wise to a red end point (pH approximately 5.1). Add 50 ml of TISAB solution. If the volume of the solution is less than 100 ml, add water to dilute to 100 ml.

22.6.2 Follow procedure of **22.5.2** to **22.5.6**.

22.6.3 Determine the milliliters of 2.0×10^{-3} M fluoride solution necessary to equal the amount of fluoride in the sample by plotting the values obtained in step **22.6.1** and subtracting from this intercept value, the intercept value for the blank.

22.6.4 If the fluoride content of this solution is too large, the slope of the resultant curve, step **22.6.2**

approaches zero. In this case, reduce the size of the sample aliquot.

22.7 Calculation

22.7.1 -Calculate the parts per million of fluoride in the sample as follows:

$$I = I_s - I_b$$

$$\text{Fluoride, ppm} = I \times (2.1 \times 10^{-3}) \times 18.9984 \\ \times 1000 \text{ ml}/V_1 \times S$$

where

I_s = intercept value for sample;

I_b = intercept value for blank, 2.0×10^{-3}
— molarity of working
fluoride solution;

18.9984 = molecular weight of fluoride;

V_1 = aliquot size of sample taken in
21.5.7, generally 50 ml; and

S = specific gravity of the sample.

ANNEX A
(Foreword)

COMMITTEE COMPOSITION

Water Quality for Industrial Purpose Sectional Committee, CHD 13

<i>Organization</i>	<i>Representative(s)</i>
Bhabha Atomic Research Centre, Mumbai	SHRI K. P. BHATTACHARYYA (Chairperson)
Bhabha Atomic Research Centre, Mumbai	SHRI SHIVAYANAMATH S. SHRI T. K. DEY (<i>Alternate</i>)
Bharat Heavy Electrical Limited, Thiruchirapali	SHRI SHAILENDRA KUMAR K. ANANDA BABU (<i>Alternate</i>)
CII-Triveni Water Institute	SHRI KAPIL K. NARULA DR SIPIKA CHAUHAN (<i>Alternate</i>)
Central Ground Water Board, Faridabad	DR NEELAM NIGAM SHRIMATI POOJA MEHROTRA (<i>Alternate</i>)
Central Leather Research Institute, Chennai	DR C. MURALIDHARAN DR K. SRI BALA KAMESWARI (<i>Alternate</i>)
Central Pollution Control Board, New Delhi	SHRI NAZIMUDDIN SHRI VISHAL GANDHI (<i>Alternate</i>)
Central Pulp and Paper Research Institute, Sharanpur	DR NITIN ENDLAY DR SANJAY TYAGI (<i>Alternate</i>)
Central Salt and Marine Chemicals Research Institute, Bhavnagar	DR SOUMYA HALDAR DR D. N. SRIVASTAVA (<i>Alternate</i>)
CECRI, Karaikudi	DR S. VASUDEVAN DR R. MALINI (<i>Alternate</i>)
Chennai Petroleum Corporation Ltd, Chennai	SHRI S. SHANKAR
Consumer education and Research Centre, Ahmedabad	MS ANINDITA MEHTA MS DOLLY JAIN (<i>Alternate</i>)
Delhi Jal Board	SHRI ASHUTOSH KAUSHIK
Department of Industrial Policy and Promotion, New Delhi	SHRI T. S. G. NARAYANAN SHRI UDAY SINGH MINA (<i>Alternate</i>)
Department of Science and Technology, New Delhi	DR NEELIMA ALAM DR SANJAI KUMAR (<i>Alternate</i>)
Grasim Industries Limited, Nagda	SHRI S. N. SASTRY SHRI ALOK SINGH (<i>Alternate</i>)
Indian Chemical Council	DR MRITUNJAY CHAUBEY SHRI KEDAR OKE (<i>Alternate</i>)
Indian Farmers Fertilizer Cooperative Limited, Allahabad	SHRI GORAKH SINGH SHRI K. S. S. MOORTHY (<i>Alternate</i>)

<i>Organization</i>	<i>Representative(s)</i>
Ion Exchange India Limited, Mumbai	SHRI SACHIN SAHA DR RENU SARAPH (<i>Alternate I</i>) SHRI ANIL K. KHERA (<i>Alternate II</i>)
Maharashtra State Electricity Board, Chandrapur	SHRI V. P. GHODMARE SHRI RAJESH DATTATRAYA CHIVANE (<i>Alternate</i>)
Ministry of Drinking Water and Sanitation , New Delhi	SHRI D. RAJASEKHAR SHRI SUMIT PRIYADARSHI (<i>Alternate</i>)
Ministry of Urban Development and Poverty Alleviation, New Delhi	DR RAMAKANT MS CHAITRA DEVOOR (<i>Alternate</i>)
National Environment Engineering Research Institute, Nagpur	SHRI G. K. KHADSE DR V. ATUL MALDHURE (<i>Alternate</i>)
NTPC Limited, New Delhi	SHRI. L. K. NAYAK SHRI ANKIT VERMA (<i>Alternate</i>)
Padarsh Pharmaceuticals Private Limited, Mumbai	SHRI MUNEESHCHADDA SHRI MAHON MANOHAR KHANDEKAR (<i>Alternate</i>)
Shriram Institute for Industrial Research, Delhi	DR VIVEK NARAYAN SINGH DR JAGDISH KUMAR (<i>Alternate</i>)
The Energy and Resource Institute, New Delhi	SHRI ANSHUMAN DR SUNEEL PANDEY (<i>Alternate</i>)
The Fertilizer Association of India, New Delhi	SHRI MANISH GOSWAMI SHRI VIJAY KUMAR GUPTA (<i>Alternate</i>)
Water and steam Chemistry Division, BARC facilities, Kalpakkam	DR B. ANUPKUMAR DIRECTOR
In Personal Capacity (307, Dwarka Palace, Nipania opp to Samar Park Colony Indore -452010)	SHRI R. S. BAGHEL
In Personal Capacity (6/66, 5th Street, Ahemed Colony, Woraiyur, Tiruchirapalli- 620003)	DR A. LAWRENCE
In Personal Capacity (514, Veer apt Sector 13 Rohini Delhi-110085)	SHRI D. K. JAIN
BIS Directorate General	SHRI A. K. LAL, SCIENTIST 'F'/SENIOR DIRECTOR AND HEAD (CHEMICAL) [REPRESENTING DIRECTOR GENERAL (<i>Ex-officio</i>)]

Member Secretary
SHUBHANJALI UMRAO
SCIENTIST 'B'/ASSITANT DIRECTOR
(CHEMICAL), BIS

Bureau of Indian Standards

BIS is a statutory institution established under the *Bureau of Indian Standards Act, 2016* to promote harmonious development of the activities of standardization, marking and quality certification of goods and attending to connected matters in the country.

Copyright

BIS has the copyright of all its publications. No part of these publications may be reproduced in any form without the prior permission in writing of BIS. This does not preclude the free use, in the course of implementing the standard, of necessary details, such as symbols and sizes, type or grade designations. Enquiries relating to copyright be addressed to the Head (Publication & Sales), BIS.

Review of Indian Standards

Amendments are issued to standards as the need arises on the basis of comments. Standards are also reviewed periodically; a standard along with amendments is reaffirmed when such review indicates that no changes are needed; if the review indicates that changes are needed, it is taken up for revision. Users of Indian Standards should ascertain that they are in possession of the latest amendments or edition by referring to the website- www.bis.gov.in or www.standardsbis.in

This Indian Standard has been developed from Doc No.: CHD 13 (20361).

Amendments Issued Since Publication

Amend No.	Date of Issue	Text Affected

BUREAU OF INDIAN STANDARDS

Headquarters:

Manak Bhavan, 9 Bahadur Shah Zafar Marg, New Delhi 110002
Telephones: 2323 0131, 2323 3375, 2323 9402

Website: www.bis.gov.in

Regional Offices:

	Telephones
Central : 601/A, Konnectus Tower -1, 6 th Floor, DMRC Building, Bhavbhuti Marg, New Delhi 110002	{ 2323 7617
Eastern : 8 th Floor, Plot No 7/7 & 7/8, CP Block, Sector V, Salt Lake, Kolkata, West Bengal 700091	{ 2367 0012 2320 9474
Northern : Plot No. 4-A, Sector 27-B, Madhya Marg, Chandigarh 160019	{ 265 9930
Southern : C.I.T. Campus, IV Cross Road, Taramani, Chennai 600113	{ 2254 1442 2254 1216
Western : Plot No. E-9, Road No.-8, MIDC, Andheri (East), Mumbai 400093	{ 2821 8093

Branches : AHMEDABAD. BENGALURU. BHOPAL. BHUBANESHWAR. CHANDIGARH. CHENNAI. COIMBATORE. DEHRADUN. DELHI. FARIDABAD. GHAZIABAD. GUWAHATI. HIMACHAL PRADESH. HUBLI. HYDERABAD. JAIPUR. JAMMU & KASHMIR. JAMSHEDPUR. KOCHI. KOLKATA. LUCKNOW. MADURAI. MUMBAI. NAGPUR. NOIDA. PANIPAT. PATNA. PUNE. RAIPUR. RAJKOT. SURAT. VISAKHAPATNAM.